### **OWNER'S MANUAL**

#### BLUE GIANT INTERLOCK CHOCK™




ACTUAL PRODUCT MAY NOT APPEAR EXACTLY AS SHOWN

#### **A**WARNING

Do not operate or service this product unless you have read and fully understand the entire contents of this manual. Failure to do so may result in bodily injury or death.



#### **2.0 RECOMMENDED SPARE PARTS**

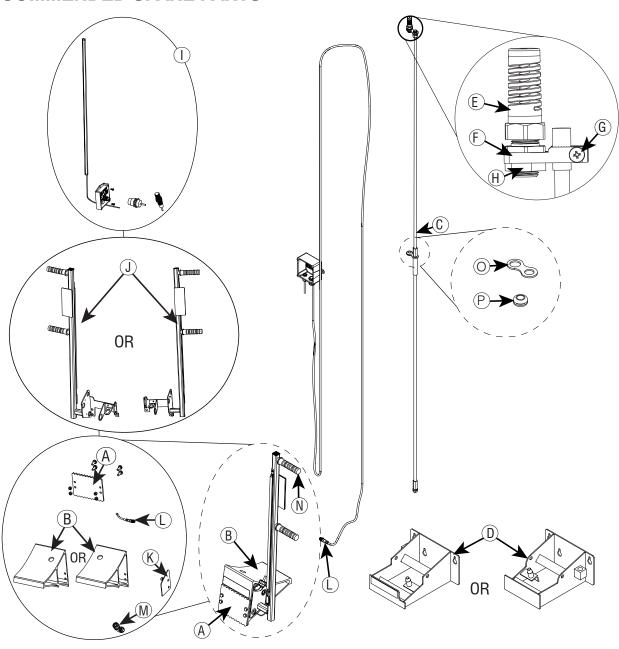

STANDARD OPERATIONAL COMPONENTS				
ITEM	PART #	DESCRIPTION	QTY REQ'D	
A	2009848	Toothed Flange	1	
В	2012832	Chock - Machined (Left Hand Drive)	1	
Ь	2012832-1	Chock - Machined (Right Hand Drive)	1	
С	012-703	Whip	1	
	2014943	Cradle (Left Hand Drive)		
D	2014943-1	Cradle (Right Hand Drive)	1	
E	012-702	Flex Strain Relief Connector	1	
F	2016909	16909 Cable Clamp		
G	011-205	Headscrew #10-24, 7/8in. long 1		

STANDARD OPERATIONAL COMPONENTS					
ITEM	PART #	DESCRIPTION	QTY REQ'D		
Н	025-200	3/8 (-18) NPT Metal Locknut	2		
	BGRM001-ITC485	I/O Board, LED board, and Sensors (Left Hand Drive)	1		
ı	BGRM001-ITC485-1	I/O Board, LED board, and Sensors (Right Hand Drive)	1		
	2015410	I/O Module with Handle Weldment (Left Hand Drive)			
J	2015410-2	I/O Module with Handle Weldment (Right Hand Drive)	I		
K	2015246	Side Cover	1		
L	026-M12-M6HD	Cable, M12-4, 6M, Male leads	1		
М	025-005	CONNECTOR 1/2" CORD GRIP - 90 DEGREE	1		
N	012-700	VINYL PLASTIC ROUND GRIPS	2		
0	2016853	CABLE HOLDER	1		
Р	012-406	GROMMET RUBBER	1		

#### 3.0 DECAL IDENTIFICATION AND LOCATION

These labels inform operators and personnel about hazardous areas on and around the Interlock Chock. Left hand drive version shown. Locations applicable for either left or right hand Interlock SHARP EDGES WATCH YOUR HANDS AND FEET (B) (E) RED LIGHT. TRAILER OCCUPANT RISK (C) *Blue Giant*, *e* 

ITEM	QTY	PART #	DESCRIPTION
Α	1	038-1135E	Caution Sharp Hazard Decal
В	1	038-1137E	Danger Chock Decal
С	2	038-1134EF	Serial Plate Decal
D	1	038-1140E	Interlock Chock logo
E	1	038-1136E	Notice Cradle Placement Decal
F	2	038-1141E	Blue Giant Logo

#### 3.1 OPERATION PLACARDS

The Operating Instruction Placard (Part. No. 038-1124E) is to be wall mounted near the dock lift controls.

The Exterior Operating Instruction Placard (Part. No. 038-1139E/F) is to be wall mounted near the External Traffic Lights.

Duplicates of 038-1139E and 038-1124E provided on the following pages. (Not to scale).

### **OPERATING INSTRUCTIONS**

Only for the Blue Giant Interlock Chock™

#### PLACE WHEEL CHOCK

Standard and end loading follow the same procedure.

Once the vehicle driver has placed the Interlock Chack, the Blue Gerius Control Panel Reshes AMBER.

Fully open the dock door.

Write the door is opening, Blue Gerius Control Porel will illuminate solid RED.

When the door is fully open, the Blue Genius Control Panel remains solid RED.

GCILD CHPLATMLMI BIS MISMI CHPLAY 8CREEN

READY TO RAISE DECK

2. Deploy dock.

While dock deploying, Blue Genius Corbol Panel illuminates solid RED.

When aboth fully deployed, Blue Genius Control Panel illuminates solid Green.

SICILO RIS MENA. DEPLAY SICREEN

PLOTINUM BIG MEMILI DEPLAY STREET DECK DEPLOYED

LEVELER READY

3. Proceed with loading or unloading.

# 

GELD BRIMENU DIEPLAY BOTTESN

PLATIMAM EIS MENU CHEPLAT BATREEN

#### REMOVE WHEEL CHOCK

 When loading or unloading is completed, restore dock to fully parked position.

When the abok leaves the deployed position and is parked, Blue. Genius Control Panel illuminates solid RED.

> WHEEL CHOCK IS ENGAGED

CHOCK ENGAGED LEVELER RESTORED

2. Close door completely.

Blue Gerius Control Purel illuminates solid RED.

GELD BOIMENU DIEPLAY BORRESI

PLATIMUM BIS MEMU CERPLAT BATREEN READY TO RELEASE

READY TO RELEASE WHEEL CHOCK

 As driver restores chock, Blue Gerius Control Purel illuminates solid RED.

> GELD BOIMENU DIEPLAY BOREEN

PLATIMAM BIS MENAI CHEPLAT BICREEN RESTORE WHEEL CHOCK

READY TO RELEASE WHEEL CHOCK

4. Chack is back in create.

Blue Gerius Control Pared remains solid RED.

GOLD OR PLATINUM BIS MISAL CREPLAY BOTESH BLUE GENIUS READY




3

038-1124E

## MANDATORY

# WHEELS **MUST BE** CHOCKED



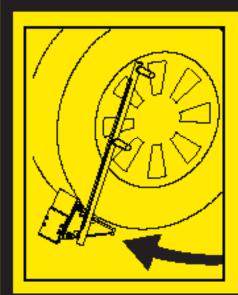


IF ALARM SOUNDS AND EL CHOCK FLASHES RED NSURE CHOCK

**MAT 4865** 038-1139E

#### **4.0 EQUIPMENT COMPONENT ILLUSTRATIONS**

This section displays the various hardware components.

#### 4.1 COMPONENTS AS SHIPPED CHECKLIST

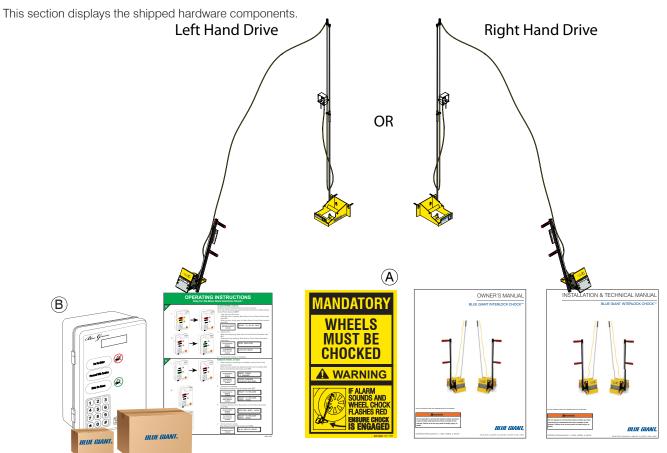


~	ITEM	QTY.	PART NO.	DESCRIPTION	APPROX. WEIGHT
	Α	1		Interlock Chock (Left or Right Hand Drive version)	_

#### Item B - CONTROL AND COMPONENTS INCLUDED:

~	QTY.	PART NO.		DESCRIPTION	APPROX. WEIGH	НТ
	1	_		Complete Control Assembly		
	2	028-201		Door Sensors		
	1	026-G019		Lip Sensor		
	1	026-M12-F5		5 Meter Cable for Proximity Sensor		
	1	026-M12-F2		2 Meter Cable for Proximity Sensor		
	1	21-002154		Bracket for Proximity Sensor		
	1	038-1124E		Interlock Chock Interior Operating Instructions Placard		
	1	038-1139	E F	Interlock Chock Exterior Operating Instructions Placard	_	_
	1	038-1125EI	'	Installation Manual		
	1	038-1125E		Owner's Manual		
	1	038-1125EPL		Interlock Chock Parts List		
	1	032-806		Exterior Traffic Light		
	1	038-225 F		Exterior Driver Warning Sign	0.7 lb	0.32 kg
	S		S			

#### **4.2 GENERAL DIMENSIONS**

This section describes the length and height of the Interlock Chock components. Left hand drive shown. Measurement are the same for either hand drive.

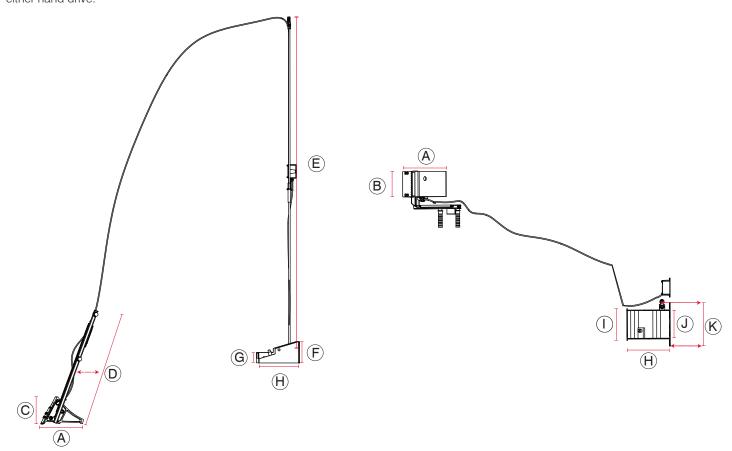


ITEM	DESCRIPTION
A	11 3/4in. (298 mm)
В	7in. (178 mm)
С	7 7/8in. (200 mm)
D	33 9/32in (845 mm)
Е	100 3/4in. (2559 mm)
F	6 1/4in. (159 mm)
G	1 13/16in. (46 mm)
Н	12in. (305 mm)
1	8 3/4in. (222 mm)
J	7 13/16in. (198 mm)
К	12in. (305 mm)

Contact your Blue Giant Dealer, if you have questions.

#### **4.3 CONTROLS**

This section depicts the Blue Genius Control Panel.


**NOTE:** Actual product may not appear exactly as shown.

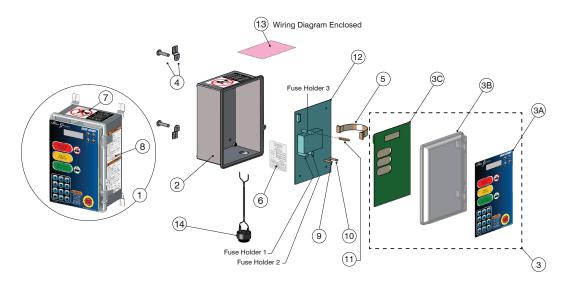

CONT	CONTROL ASSEMBLY				
ITEM	QTY	PART #	DESCRIPTION		
1	4	BGG0H1115F	Complete Control Assembly, English / French		
I	1	BGG0H1115S	Complete Control Assembly, English / Spanish		
2	1	025-G010-M	Control Box Enclosure (Includes 3B)		
3	1	Consult Factory	Control Box Lid (3B) with Decal (3A) & Control / Board (3C) (Serial # Required)		
3A	1	038-245EF	Button Decal, English / French		
3A	ľ	038-245ES	Button Decal, English / Spanish		
3B	1	025-G014-M	Cover Only		
3C	1	026-G020-99	Blue Genius™ Control / Touch Board		
4	4	025-G010-1	Mounting Tabs		
5	1	026-G030	Ribbon Cable		
6	1	038-284EF	Decal, Serial Plate English / French		
	ı	038-284ES	Decal, Serial Plate English / Spanish		
7	1	038-283ESF	Decal, Do Not Drill		
8	4	038-853EF	Warning Decal, English / French		
· · · · · · · · · · · · · · · · · · ·	1	l l	'	038-853ES	Warning Decal, English / Spanish
9	1	026-G104	Fuse, 250V, 0.75 Amp (Fast acting 1/4in. x 1-1/4in.)		
10	1	026-G123	Fuse, 250V, 5 Amp (Time delay 1/4in. x 1-1/4in.)		
11	1	026-237-1	Fuse, 250V, 2-1/2 Amp (Fast acting 1/4in. x 1-1/4in.)		
12	1	Varies on Model	odel Blue Genius™ Power Board		
13	1	026-615-1	Anti-Static Poly Bag (Wiring diagram enclosed - serial # required)		
14	1	026-G402-B	Audible Speaker		

#### **4.4 JUNCTION BOX W/REMOTE I/O**


This section depicts the junction box connecting the Blue Genius Control Panel to the wiring external to the building.

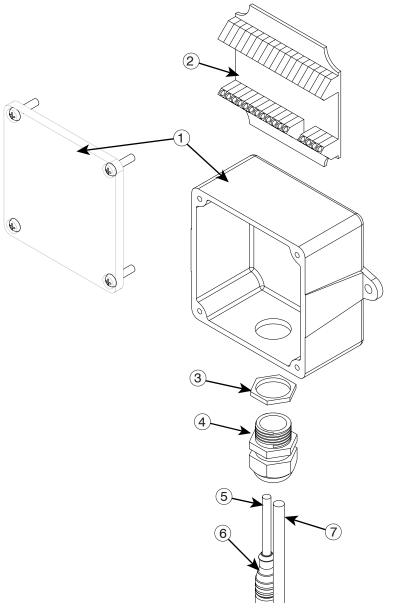

JUNCT	JUNCTION BOX ASSEMBLY				
ITEM	QTY	PART #	DESCRIPTION		
1	1	025-G020-1R	Junction Box 4 x 4		
2	1	026-G025BM	Remote I/O Board (Resistor)		
3	1	025-177	PG16 Metal Locknut		
4	1	025-174	PG16 Cable Gland		
5	1	025-177	PG16 Multi-Hole Seal		
6	1	026-H16-1	Com. Cable Shielded - 30 ft		
7	1	026-M12-F5	7-Wire Cable (From Junction Box Assembly)		

#### 4.5 JUNCTION BOX ASSEMBLY


This section depicts the exterior junction box that connects the Interlock Chock and Exterior Traffic Lights to the wiring from the Blue Genius Control Panel

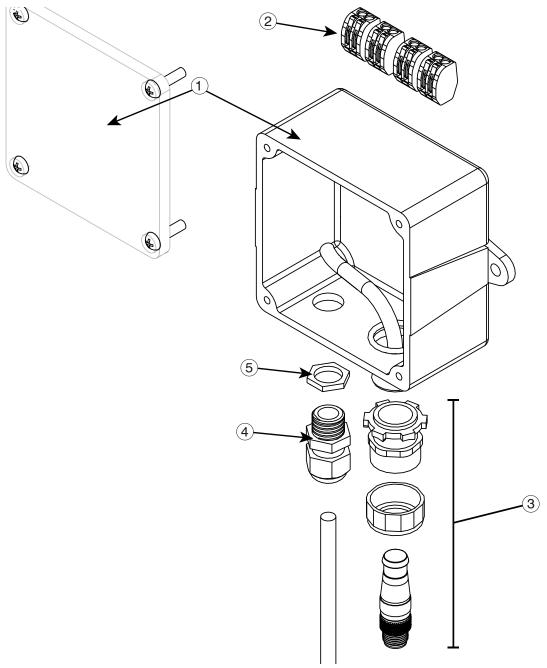

JUNCTION BOX ASSEMBLY				
ITEM #	QTY	PART #	DESCRIPTION	
1	1	025-G020-1P	Junction Box 4 x 4	
2	1	030-900-2	Terminal Blocks	
3	1	025-016	Fitting SR-50-625 3/4in.	
4	1	025-173	PG9 Cable Gland	
5	1	025-176	PG9 Metal Locknut	


#### **4.6 DOCK INTERLOCK SENSOR**

- Ties sequence of vehicle restraint to dock leveler operation
- Loading dock safety is improved with accurate operation sequence
- Interior traffic light and vehicle restraint release operation relies on interlock capability
- Mounted at parked position of any leveler

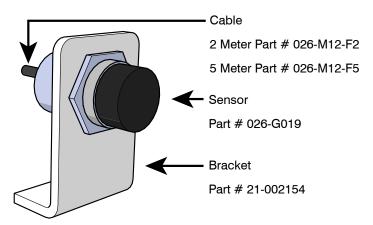


#### **5.0 EXTERIOR DRIVER TRAFFIC LIGHT**

The exterior traffic lights improve loading dock safety.

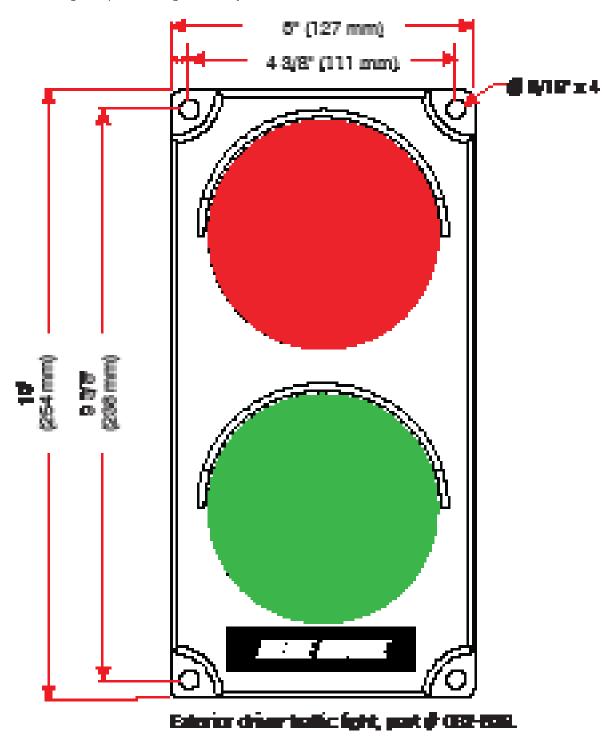

#### **5.1 EXTERIOR DRIVER WARNING SIGN**

The exterior warning sign for drivers improves loading dock safety.

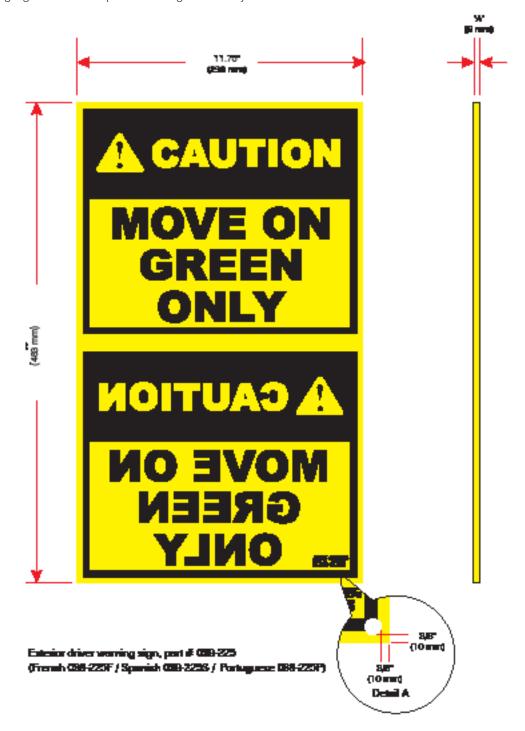

#### **5.2 EXTERIOR OPERATING INSTRUCTION PLACARD**

The Exterior Operation Placard (part # 038-1139E/F) for outside dock workers or drivers.



#### **5.3 INTERIOR OPERATING INSTRUCTION PLACARD**

The interior operating instruction placard for inside dock workers.

